

Questions?

Contact Us Monday - Friday

7am – 5pm PST



Call

800-518-8925
Press 2



Text

858-683-7877



Email

Support@uAttendStaffing.com



Visit

Support.StaffMyClients.com



Designed, Developed, and Supported by Workwell Technologies, Inc.
© Workwell Technologies, Inc. All rights reserved.
2777 Loker Avenue Suite A Carlsbad CA 92010
www.WorkwellTech.com

Dealer ID

Quick Start Guide

FE2000 – Facial Recognition & Voice Control Time Clock


FE2500 – Facial Recognition & Voice Control Time Clock
with Temperature Reader

uAttend
Staffing

Set Up Your Time Clock In 5 Easy Steps


1 Create Your uAttend Staffing Account

Go to admin.staffmyclients.com/signup to create your account using your Dealer ID, which can be found on the back of this guide.

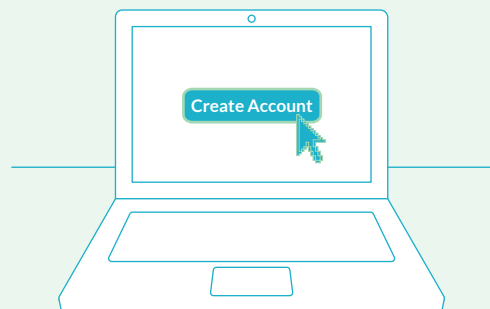


2 Connect Your Time Clock to the Cloud

Activate your time clock by plugging it into a power source and connecting it with Wi-Fi or LAN. Follow the on-screen instructions to pair your clock to your uAttend Staffing cloud account.

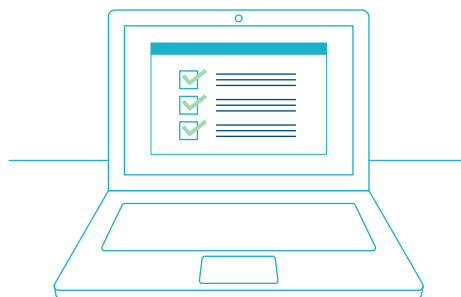


3 Choose Your Temperature Reader* Setting

If your time clock has a temperature reader, you can enable its settings by logging into your uAttend Staffing account and selecting **Clocks** in the left-hand menu, then selecting **Default Temperature Settings**.

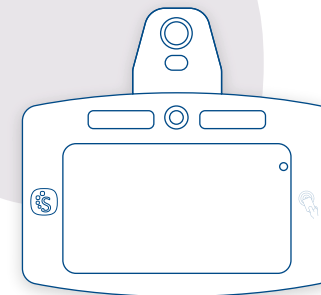


4 Mount Your Time Clock

Use the provided mounting hardware and directions to mount your time clock to a secure wall.

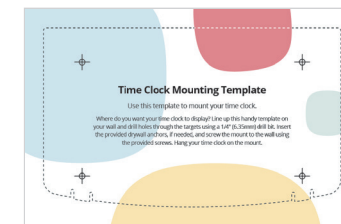

5 Register Employee Faces

Enter your **Administrator PIN** and tap the **Employee** menu. Select an employee name to register their face template and follow the on-screen prompts to scan and save.

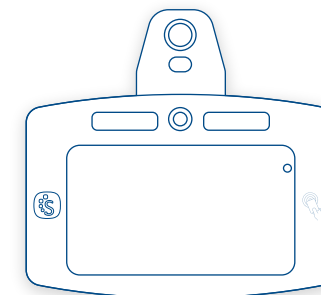

*Workwell is not advertising its products for use in the medical industry or for medical purposes. Our products are not intended to diagnose or exclude contagions such as COVID-19, SARS, or any other medical condition and should not be used as such. Our products are intended to serve as a first-line filter by assisting an organization and its employees in identifying those employees who may have an elevated body temperature. While our products may archive readings for reporting and audit purposes, it is solely the responsibility of the organization to communicate the use of the information to its employees, to obtain any necessary consent from its employees and to determine how the information is used. The organization should not rely solely on our products for making such a determination. Various environmental and methodological factors can impact thermal imaging; therefore, the readings from our products should not be relied upon as the sole determinant of a person's body temperature. Competent medical advice and further checks should be sought if there are concerns regarding an employee's health or possible illness. Workwell hereby disclaims all liability with respect to the conditions and limitations described in this paragraph.